



PLYWOOD SUBSTRATE INSTALLATION

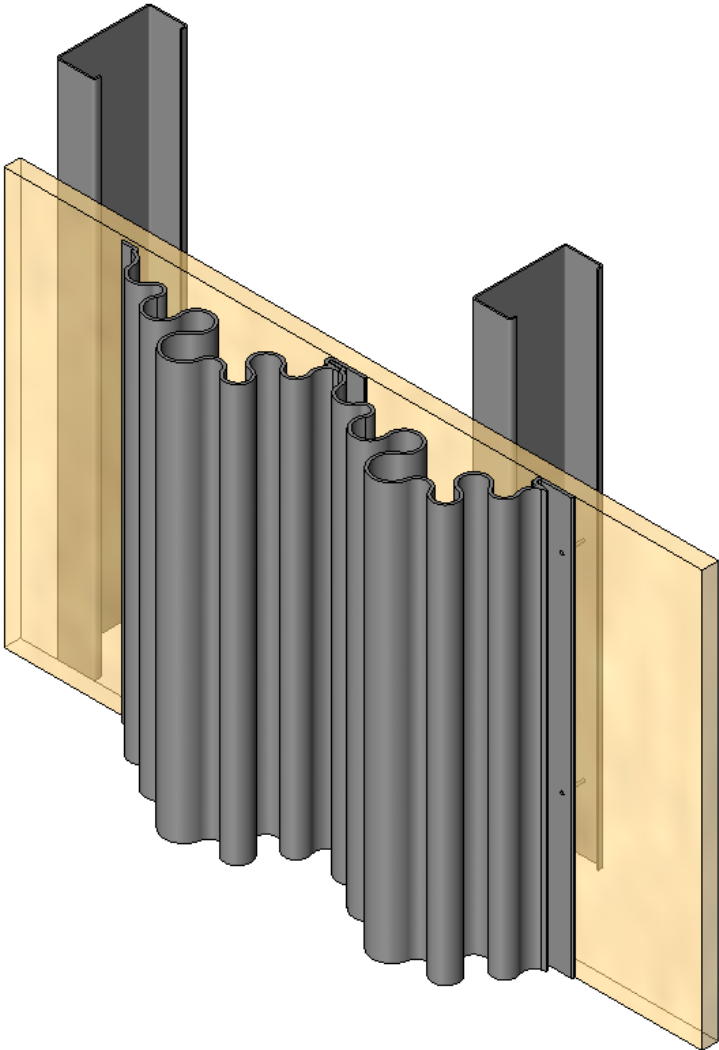

FURRING STRIP INSTALLATION

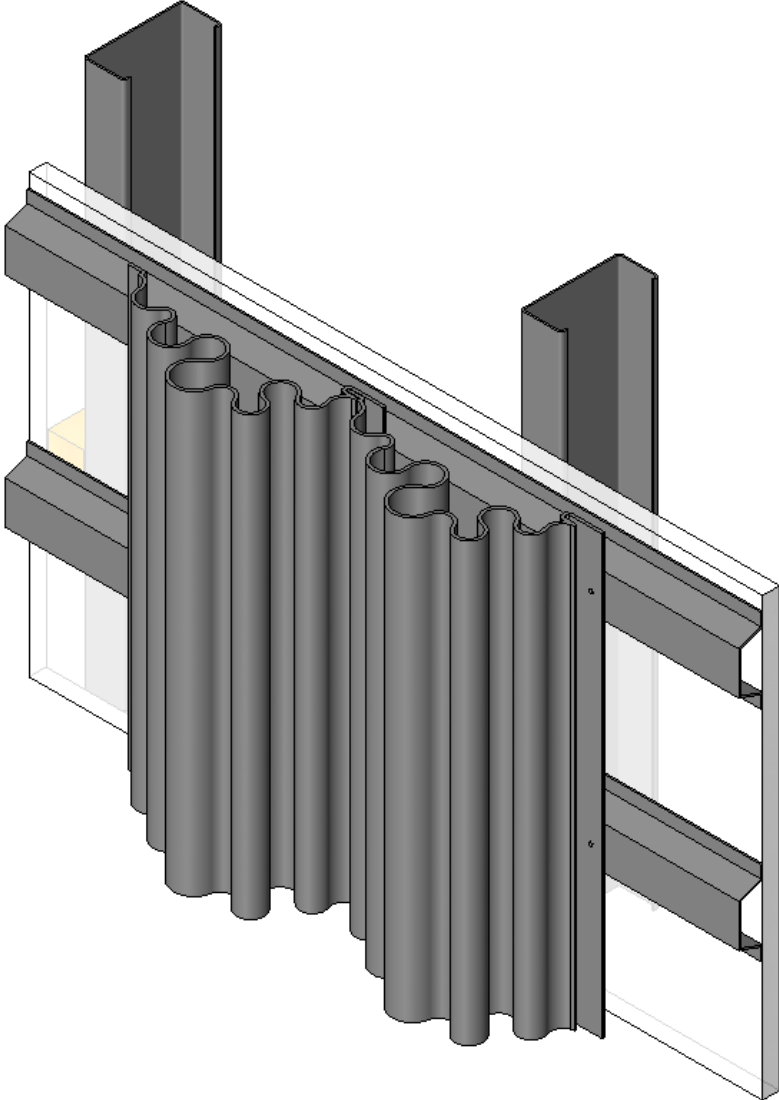

DRYWALL SUBSTRATE INSTALLATION

